


Free Plans to Build a One Kings Lane Inspired Harrison End Table

Free Plans to Build a One Kings Lane Inspired Harrison End Table

Such a cool table... Just my style – cheap and easy!! Can't beat that, right?

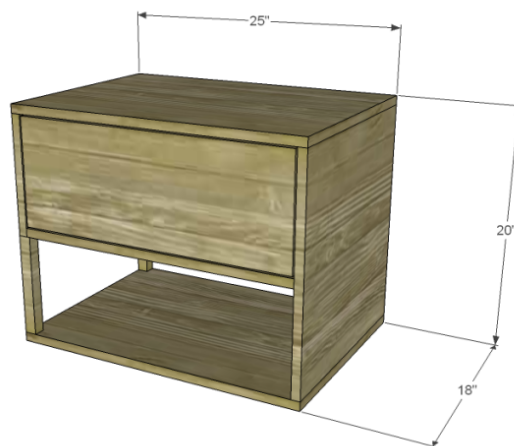

One Kings Lane Inspired Harrison End Table

And... If you're a little OCD like me about symmetry – the tables can be constructed in a right or left version by switching the placement of the back! Holla!



Materials:

- 1-1/4" pocket hole screws
- 1-1/4" screws
- Edge banding for plywood , optional
- One set of 16" drawer slides (per table)
- Drawer pull
- Finishing supplies

Lumber:

- One 1" square dowel at 3'
- Half sheet of 3/4" plywood


Cut list:

- 2 – 3/4" plywood at 18" x 25" – Base & Top
- 2 – 1" dowel rods at 8-1/2" – Legs
- 1 – 3/4" plywood at 10" x 18" – Side
- 1 – 3/4" plywood at 18" x 18-1/2" – Side
- 1 – 3/4"plywood at 18" x 23-1/2" – Shelf
- 1 – 3/4" plywood at 9-1/4" x 23-1/2" – Back
- 1 – 3/4" plywood at 16" x 21" – Drawer Bottom
- 2 – 3/4" plywood at 9" x 16" – Drawer Sides
- 1 – 3/4" plywood at 9" x 22-1/2" – Drawer Back
- 1 – 3/4" plywood at 9" x 23-1/4" – Drawer Front


Click on the drawings for a larger view!

1. If using edge banding, it will be applied to the exposed edges of the plywood before assembly.

Cut the pieces for the base, legs, and sides. Drill pocket holes as shown in the shorter side, and drill pocket holes in the top and bottom edges of the larger side. Attach the dowels to the shorter side using glue and 1-1/4" pocket hole screws. The dowels will be flush with the outside face of the side piece. Attach the base using countersunk 1-1/4" screws through the base into the dowels. Attach the larger side to the base using glue and 1-1/4" pocket hole screws.

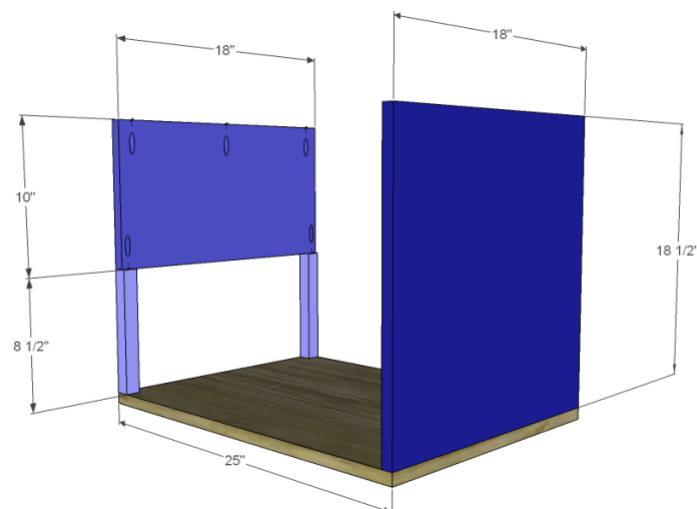


2. Cut the piece for the shelf and drill pocket holes as shown. Position the shelf so the pocket holes face up (and will be hidden by the drawer) and secure using glue and 1-1/4" pocket hole screws.

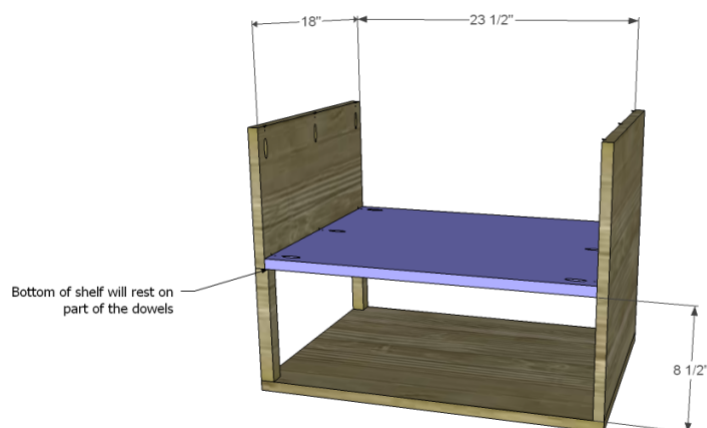


3. Cut the piece for the back and drill pocket holes as shown.



Position inside the cabinet and secure using glue and 1-1/4" pocket hole screws.

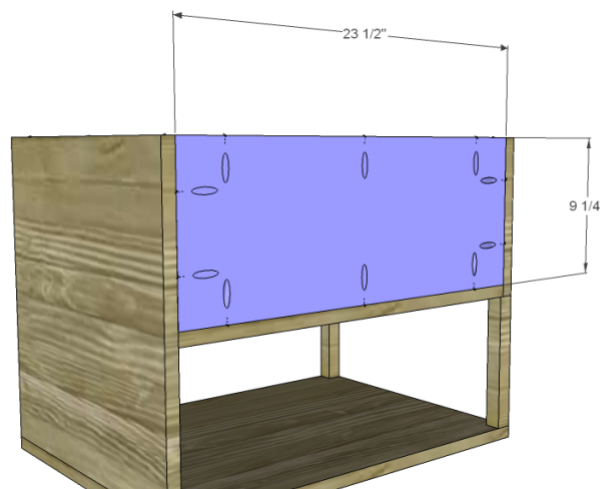

4. Cut the piece for the top. Attach using glue and 1-1/4" pocket hole screws through the holes in the sides and back into the bottom of the piece.

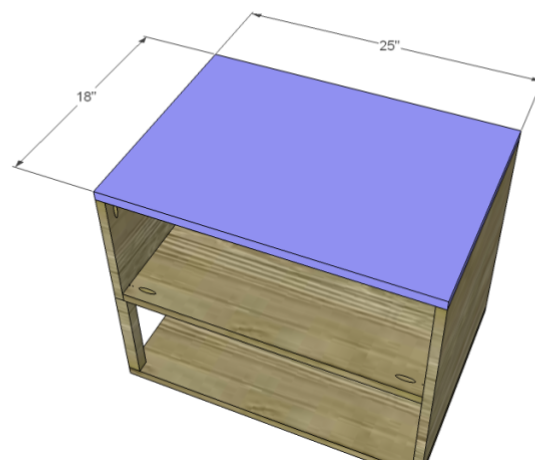

5. Cut the pieces for the drawers. Drill pocket holes in each end of the side pieces as well as all four edges of the bottom. Assemble as shown using glue and 1-1/4" pocket hole screws. The fronts will overlap the drawer box by 3/8" on each side. Install the drawer slides according to the manufacturer's instructions. For an easy tutorial, [click here](#). Make any necessary adjustments.

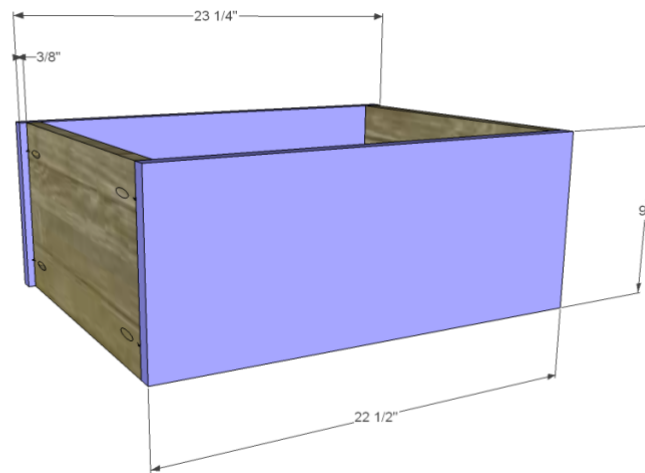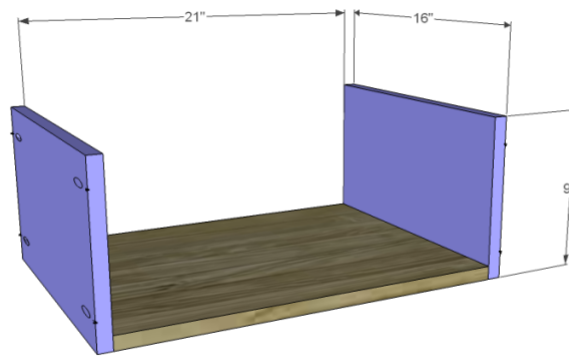

There will be a 1/8" gap around all sides of the drawer



Finish as desired!

Got a project you've completed using my plans? Share photos with me at [cher {at} designsbystudioc {dot} com](mailto:cher@designsbystudioc.com) or [designsbystudioc {at} gmail {dot} com](mailto:designsbystudioc@gmail.com). I would love to feature your work on DbSC!

Until next time,

Happy Creating!

#DIY #woodworking #build